



**Topaz Systems, Inc.
Topaz LCD 4X3 Contrast Adjustment How-To**

Topaz Systems, Inc.
650 Cochran Street, Unit 6
Simi Valley, CA, 93065
©1995-2006, all rights reserved, US patent 6,307,955, and pending

www.topazsystems.com
tech support: 805 520-8286
support@topazsystems.com

This document is a guide to adjusting the contrast of the LCD screen for users of the Topaz Signature Gem LCD 4x3, pictured below. The steps apply to both serial and USB connection.



Begin with the signature pad unplugged. First, the user must place the pen tip in the upper-right corner of the LCD, as shown below.



With the pen depressed in this position, connect the pad to your computer.

Next, the user will see a menu displaying the options “LIGHTER,” “DARKER,” and “ok.” The model number will also be displayed on the bottom. If you do not see these options unplug the tablet and try again, making sure the tip is firmly depressed on the surface of the LCD while plugging the tablet into the computer.




To make the LCD darker (increase contrast), you should now tap the pen repeatedly, on “DARKER,” as shown below.



Instead, if you wish to make the LCD lighter (decrease contrast), tap on the LCD on “LIGHTER,” as shown below.



Once finished, simply click the “ok” on the bottom-left and the new contrast setting will take effect. The pad is now ready to be used.

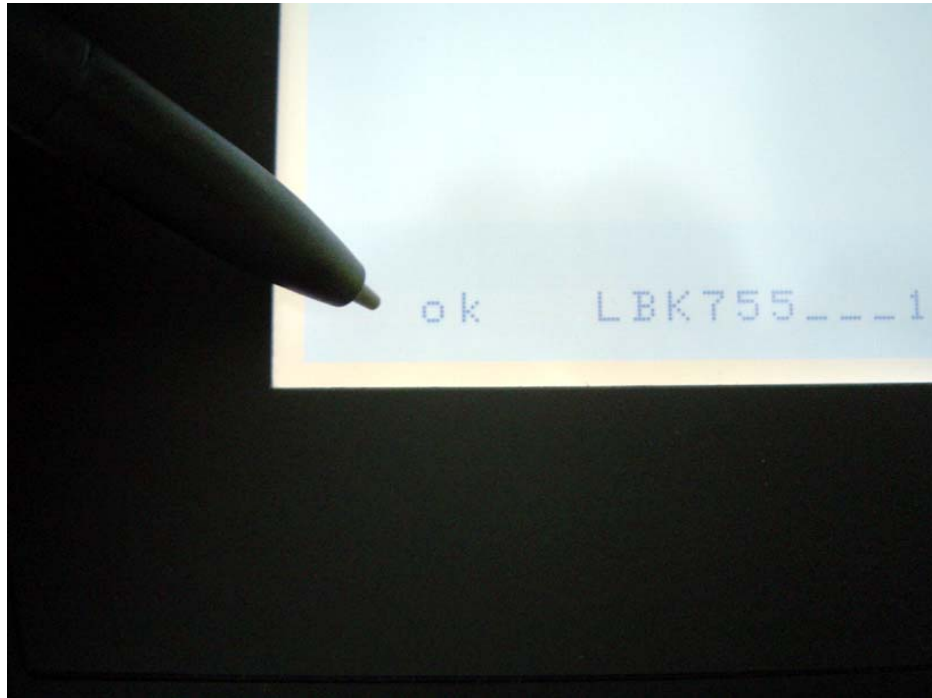

For more information regarding products and support, please visit the Topaz web site at <http://www.topazsystems.com>