



How-To Guide

B and BT2 Pads Using Epic's Hyperspace in a Remote Environment

Copyright © Topaz Systems Inc. All rights reserved.

For Topaz Systems, Inc. trademarks and patents, visit www.topazsystems.com/legal.

Table of Contents


Detailed Steps for Setting Up a B or BT2 Pad in Epic Hyperspace	3
For Citrix XenApp.....	3
<i>Part 1: Client Side Installation.....</i>	<i>3</i>
<i>Part 2: Server Side Installation.....</i>	<i>4</i>
Testing Your Signature Pad.....	5

Detailed Steps for Setting Up a B or BT2 Pad in Epic Hyperspace

For Citrix XenApp

Part 1: Client Side Installation

1. Download/save SigPlus to your local client computer/terminal:
www.topazsystems.com/Software/sigplus.exe.
2. Right-click the “sigplus.exe”, and choose “Run as Administrator”.
3. Follow the installer through, choosing the appropriate tablet model during install.
4. Click “Start”, right-click on “Computer”, and choose “Properties”. Click “Device Manager” from the menu on the left.
5. Expand the “Ports” section and locate the “USB Serial Port” entry.

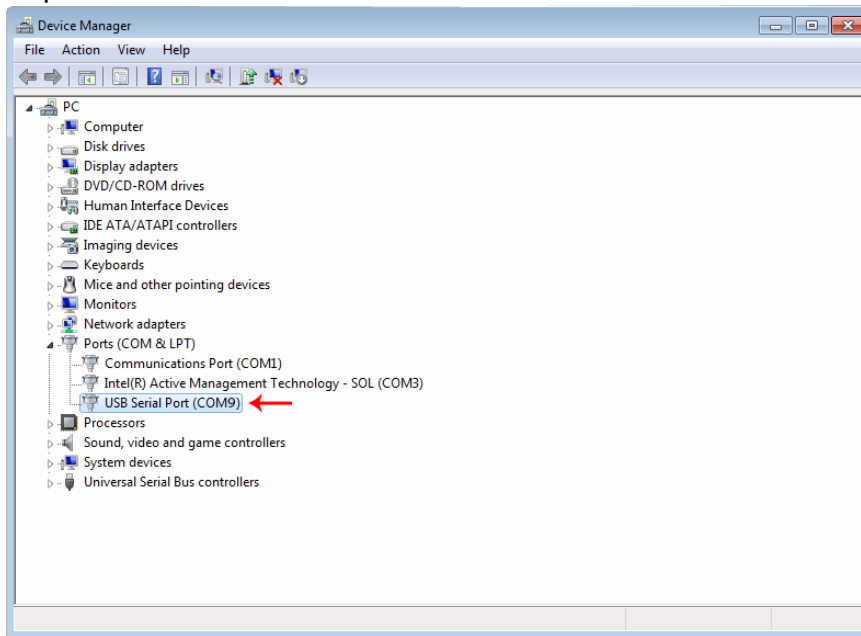


Note what COM port was assigned to this device. This value will be required later in setup. The default is COM9.

Part 2: Server Side Installation

1. Log into the server using an RDC as Administrator or XenApp session.
2. If you have not already done so, download SigToolESI to your server for your version of Epic Hyperspace from the Topaz software site: www.sigpluspro.com/epic-index.html.
3. From a CMD line, type “Change user /install” to enter “Install mode”. Install the SigToolESI.exe download from step 2 above. Choose your tablet model during install and the COM1 connection type. After installing, from CMD line, type “Change user /execute” or restart the server to place the server back into “Execute mode” before using the application.
4. Copy the “SigPlus.ini” from C:\Windows on the server and place it into the root of C:\ on the server. Then rename it to “SigPlusRoot.ini”.

If you are using XenApp 7 or newer, skip Step 5 below and continue with Step 6. If you using XenApp 6.5 or older, finish with Step 5 below (do not follow Steps 6-9).

5. To map the serial port on the server to the client, run “Net Use” in a command prompt or BAT file on the server. For example, the following Net Use call would map COM1 on the server to COM4 on the client:

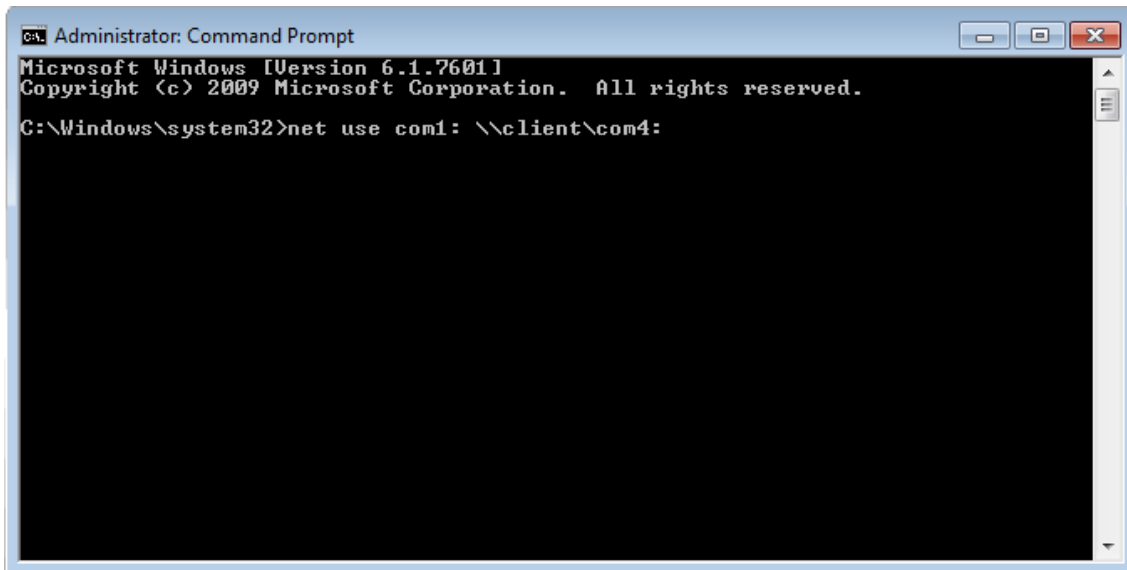

```


Administrator: Command Prompt
Microsoft Windows [Version 6.1.7601]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Windows\system32>net use com1: \\client\com4:
  
```

NOTE: The word “client” in the above command is not a variable; do not replace this with the name of your client.

6. Log into XenApp 7.x. Open the RegEdit and add a key, “Deprecated”, under HKLM\Software\Citrix\GroupPolicy\Defaults, if the key does not exist.
7. At the Deprecated key, add a REG_DWORD value “AllowComPortRedirection” and set it to 1.
8. Publish the Windows command line in XenApp. Reboot the system to enable COM Port Redirection Policy.
9. Log into Citrix XenApp; then, launch the command line program. To map the serial port on the server to the client, run “Net Use” in this command line.

For example, the following Net Use call would map COM1 on the server to COM4 on the client:

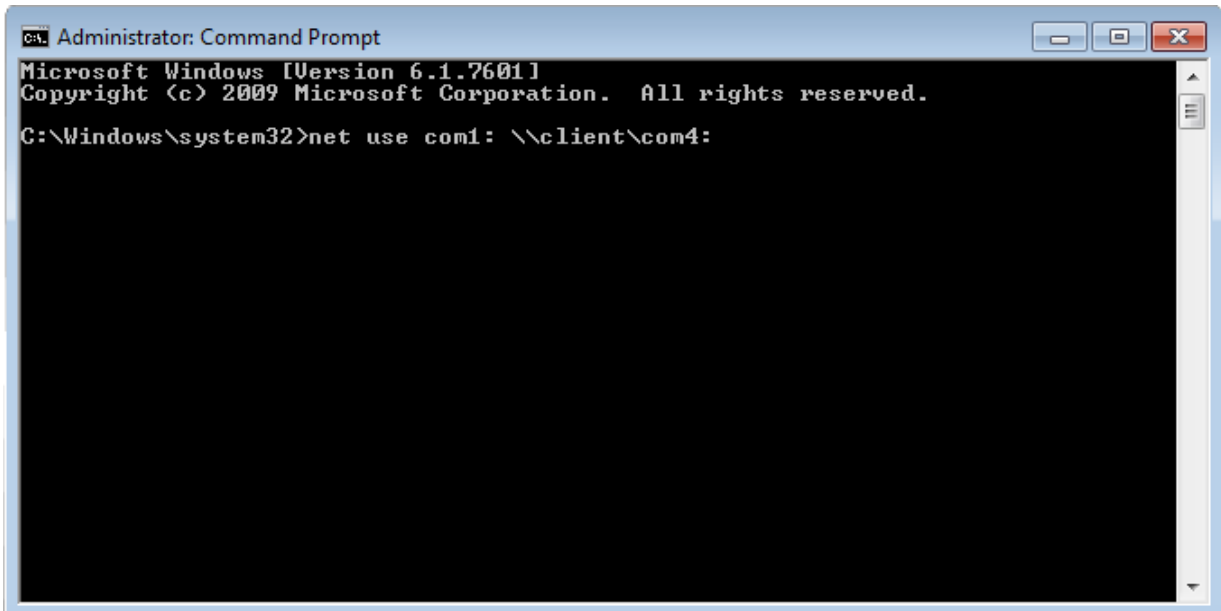

```

Administrator: Command Prompt
Microsoft Windows [Version 6.1.7601]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Windows\system32>net use com1: \\client\com4:
  
```

NOTE: The word “client” in the above command is not a variable; do not replace this with the name of your client.

Testing Your Signature Pad

Before testing your application, you should test with “DemoOCX.exe”. This can be found in C:\Windows\SigPlus on the server. Open “DemoOCX.exe”, click “Start”, and sign on your pad.